


RFO RotorFlow Accessories

Switch-Pak™, Ratemeter/Totalizer and Power Supply

These useful accessories help put RFO RotorFlow Sensors to work and expand their capabilities. The RotorFlow sensor sends its signals to either or *both* a panel mounted meter for Rate and Totalizing display, and the GEMS Switch-Pak—a remote mounted relay for controlling AC/DC loads such as pumps and valves.

FLOW SENSORS

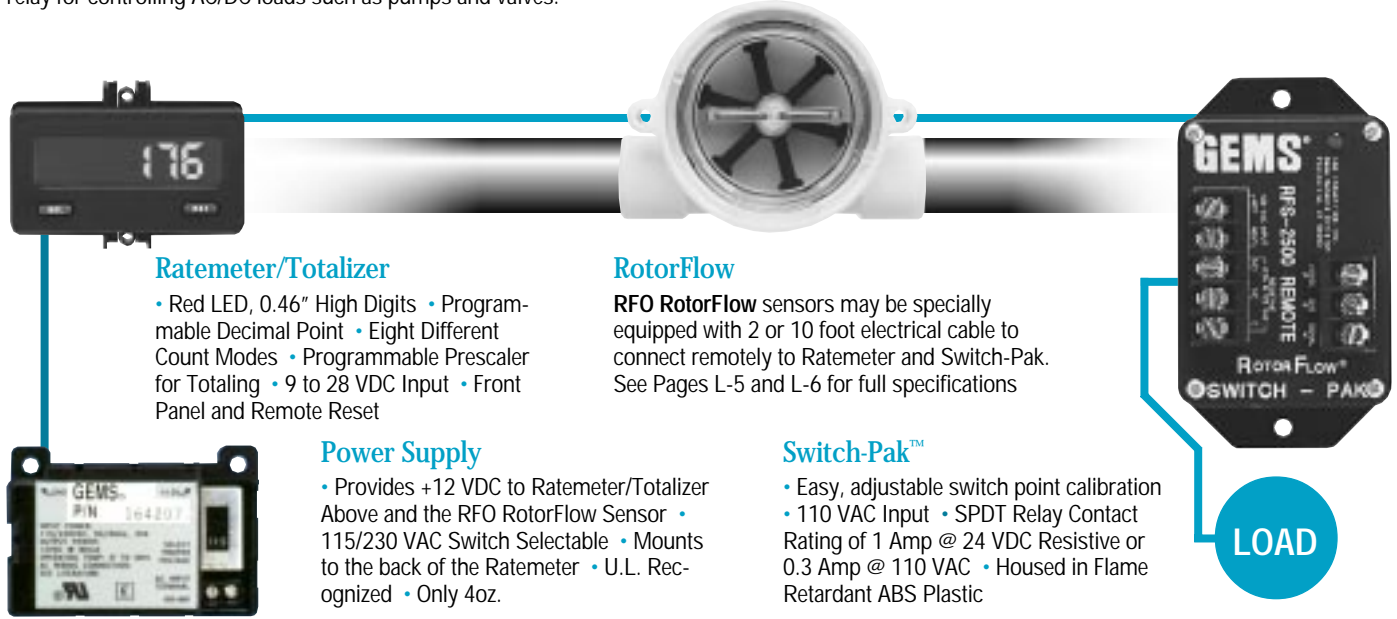

Ratemeter/Totalizer

- Red LED, 0.46" High Digits
- Programmable Decimal Point
- Eight Different Count Modes
- Programmable Prescaler for Totaling
- 9 to 28 VDC Input
- Front Panel and Remote Reset

RotorFlow

RFO RotorFlow sensors may be specially equipped with 2 or 10 foot electrical cable to connect remotely to Ratemeter and Switch-Pak. See Pages L-5 and L-6 for full specifications

Power Supply

- Provides +12 VDC to Ratemeter/Totalizer Above and the RFO RotorFlow Sensor
- 115/230 VAC Switch Selectable
- Mounts to the back of the Ratemeter
- U.L. Recognized
- Only 4oz.

Switch-Pak™

- Easy, adjustable switch point calibration
- 110 VAC Input
- SPDT Relay Contact Rating of 1 Amp @ 24 VDC Resistive or 0.3 Amp @ 110 VAC
- Housed in Flame Retardant ABS Plastic

How To Order – RFO RotorFlow with 2 or 10 foot Cable

For standard configurations, specify Part Number based on desired body material and port size. See Pages L-5 and L-6 for full specifications.

Body Material	Port Size NPT	Flow Ranges – GPM		Part Number
		Low* Range (Accuracy)	Standard Range (Accuracy)	
Polypropylene	.25"	0.1 to 1.0 (±7.0%)	0.5 to 5.0 (±7.0%)	155421 ⚡
	.50"	1.5 to 12.0 (±7.0%)	4.0 to 20.0 (±15.0%)	155481 ⚡
Brass	.25"	0.1 to 1.0 (±7.0%)	0.5 to 5.0 (±7.0%)	156261 ⚡
	.50"	1.5 to 12.0 (±7.0%)	4.0 to 20.0 (±15.0%)	156262 ⚡
	.75"	–	6.0 to 30.0 (±15.0%)	156263 ⚡
Stainless Steel	9/16-18	0.1 to 1.0 (±7.0%)	0.5 to 5.0 (±7.0%)	165071 ⚡
	.50"	1.5 to 12.0 (±7.0%)	4.0 to 20.0 (±15.0%)	165075 ⚡

Note: Improved accuracy can be achieved by calibrating the individual RFO unit with the external controller or indicator.

* With use of Low Flow Adapter supplied. See Page L-2 for more information.

** To specify 10' cable length, add -10 to above part numbers.

⚡ – Stock Items.




How To Order – Accessories

RFO RotorFlow Accessories are designed to work together to form a system. They may, however, be ordered separately by Part Number.

Accessory Item	Part Number
Switch-Pak	163740 ⚡
Ratemeter/Totalizer	164206 ⚡
Power Supply	164207 ⚡

Dimensions

Ratemeter/Totalizer

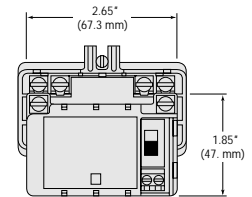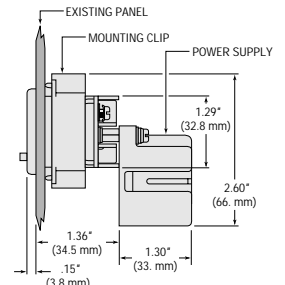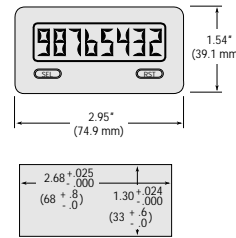

Switch-Pak™

